TRANSCEND™

by **VONDREHLE**


CENTERPULL DISPENSER



INSTRUCTIONS

DISPENSER INSTALLATION

- Use the supplied key to open the dispenser and remove the mounting plate from the back of the dispenser by pressing the mounting plate tab and sliding the mounting plate out. Keep screw for final installation in Step 3.
- 2. Align the mounting plate to desired position on the wall or surface. Using a level, mark 4 or 5 mounting holes on the wall. Drill the mounting holes and use the supplied hardware kit or appropriate anchors to mount the plate to the wall.
- 3. Align the dispenser to the mounting plate and slide the dispenser to the right until the dispenser locks in place. To secure the dispenser to the mounting plate, insert the provided screw into the Mounting Lock hole and tighten. Dispenser is ready to load.

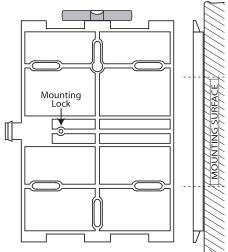

Transcend™ Dual Purpose Locking Mechanism

The lock has 2 modes of operation -

PUSH ☐ BUTTON ■

LOCKED


- 1. To use the dispenser in the LOCKED position, the lock should be in the 9 o'clock position.
- 2. To use the dispenser in the Keyless /Push-button open, the lock should be in the 12 o'clock position.
- 3. If lock moves out of the 12 o'clock position, use the key to reset it back exactly to 12 o'clock.

DISPENSER REMOVAL

- 1. Open the dispenser using the supplied key and remove paper.
- 2. Remove "locking screw".
- 3. Press down on the mounting plate tab while sliding the dispenser to the left to disengage from the mounting plate. NOTE: Keep dispenser pressed tightly against the wall while disengaging.

LOADING PAPER

- Remove perforated cardboard core by pulling along the perforation indicated by the black ink stripe.
 (See Figure 2) Do not remove tape from outside of roll.
- 2. Pull toweling from the center of the roll and pinch don't twist the end of the toweling enough to slide into the dispensing cone. (See Figure 3)
- 3. Feed toweling through the dispensing opening at the bottom of the dispenser. Close dispenser. (See figure 4)

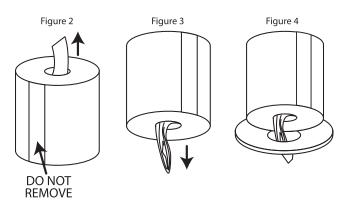



Hickory, North Carolina